

## EQ22/EQ32 Instructions



**Chair Height Adjustment.** The overall height of the chair can be adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the required height. To lower the chairs simply lift this lever and release at the required height.



**Synchronised Recline Adjustment.** The synchronised recline of the seat and back can be adjusted by twisting the rotary control located below the seat on the left-hand side. This control can be slid outwards for easier access. The seat and back can be unlocked by twisting the control anti clockwise or locked at the required angle by twisting the control clockwise. If the control is left in the unlocked position the seat and back will follow your movements in free float mode. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before the lock will release.


The tension of the recline can be adjusted by twisting the rotary control located under the front of the seat on the right-hand side. This tension control slides out for easy access.



**Seat Depth Adjustment.** The seat depth can be adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and backwards until the required position is achieved and release the lever to lock the seat in place.



**Inflatable Lumbar Support.** The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.

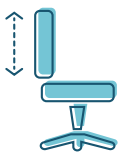

**Back Height Adjustment.** The back height can be adjusted by lifting the back up a step at a time until the correct positioning of the lumbar support is achieved. When the back reaches the top of its travel it will drop back to the start position.



**Arm Height Adjustment.** The height adjustable arms have a lever located under the inside edge of the arm pad. Press this in and lift the arm to the desired position.



**Folding Adjustable Arms.** If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



**Headrest Adjustment.** Where fitted, the headrest can be lifted and rotated for correct positioning.

## EQ22/EQ32 Instructions